



How to... Configure ConfigPPP - all GV Modems

Introduction:

This document provides information about how to configure your Global Village modem for use with PPP dialers.

As there are different versions of ConfigPPP available, the information provided is general in nature. For specific information relating to configuring ConfigPPP, please contact your Internet Service Provider.

The following instructions pertain to configuring your modem with ConfigPPP. For instructions on using MacTCP or TCP/IP, please contact your Internet Service Provider.

1. Open the "ConfigPPP" control panel.
2. Choose the location of your modem from the "Port Name" pop-up menu.
3. Set "Idle Timeout" to "None".
4. Set "Echo Interval" to "Off".
5. Uncheck Terminal Window.
6. Check Hangup on Close.
7. Choose the name of your PPP server from the "PPP Server" pop-up menu. To add a new server to this pop-up menu, click the New button, enter the name of the PPP server, and click OK.
8. Click on Config.
9. For Port Speed, select:
 - 2400 for Bronze, Bronze II
 - 38400 for Silver
 - 57600 for Gold, Gold II, and Mercury
 - Select the highest possible Port Speed for all other modems.
10. For Flow Control, select:
 - NONE for Bronze, Bronze II
 - CTS Only for Silver, Gold, and Gold II
 - CTS and RTS for all other modem models.

11. Select Tone Dial (unless you are using a pulse dial phoneline).
12. Enter the phone number to dial in the "Phone num" box.
13. In the "Modem Init" box enter:

Platinum (TelePorts and PowerPorts)	}	AT&F1W2
33.6 Modems		
TelePort K56Flex		
Global Village K56Flex PC Card		
TelePort V.90		

TelePort X2	}	AT&F1
TelePort Gold (all)		
TelePort Silver		
Mercury (all)		
PowerPort Gold PC Card		

PowerPort Silver (for 1xx PowerBooks)	}	AT&F\J0\Q3\N7%C1\V2W1
PowerPort Gold (for 1xx PowerBooks)		

Bronze (all)	}	AT&F
--------------	---	------

14. Do not modify the Connect Script, LCP Options, and IPCP Options.
15. Click the Authentication button, enter your ID and password, and click OK. If you do not enter your ID and password now, you will be prompted for this information at connection time.
16. Click the Done button to save your configuration changes.
17. Close the "Config PPP" control panel.