



How to... Configure FreePPP - all GV Modems

Introduction:

This document provides information about how to configure FreePPP software for all Global Village modems.

As there are different versions of FreePPP available, the information provided is general in nature. The following instructions pertain to configuring your modem with FreePPP. For specific information relating to configuring FreePPP, MacTCP, or TCP/IP, please contact your Internet Service Provider.

1. Open the "Free PPP" setup application.
2. Make sure the triangle in the lower left corner of the FreePPP window is pointing downward.
3. Select the General tab.
4. Click on "Modem Setup" located in the lower left corner of the window.
5. Select the appropriate serial port that your modem is "Connected to."
6. Set the "Dial Type" to Tone. (unless you are using a rotary dialing system)
7. Under "Modem Init String Settings," select the third choice titled "Use" and enter the appropriate string for your modem:

Platinum (TelePorts and PowerPorts)	}	AT&F1W2
33.6 Modems		
TelePort K56Flex (use W2 instead of W1)		
Global Village K56Flex PC Card		
TelePort V.90		
TelePort X2	}	AT&F1
TelePort Gold (all)		
TelePort Silver		
Mercury (TelePorts and PowerPorts)		
PowerPort Gold PC Card		

PowerPort Silver (for 1xx PowerBooks)	}	AT&F\J0\Q3\N7%C1\V2W1
PowerPort Gold (for 1xx PowerBooks)		
Bronze (all)	}	AT&F

Click on "OK" when finished with entering your proper "Init" string.

If you need further assistance with the use of FreePPP, please contact your Internet Service Provider.